

ottobock.

## Paexo Thumb

### DE Vorteile auf einem Blick

- Entlastung des Daumens um bis zu 70% durch Ableitung der Kräfte in die gesamte Hand und Schutz der Daumenkuppe vor mechanischen Einwirkungen
- Beim Clipsen, Stecken und Stopfen in der Montage oder im Lack nimmt der Anwender automatisch eine ergonomische Handhaltung ein.
- Volle Bewegungsfreiheit des Daumengelenks
- Gute Passform durch 7 verfügbare Größen
- Leichte Handhabung durch geringes Gewicht und schnelles An- und Ablegen

### EN Benefits at a glance


- Relieves strain on the thumb by up to 70% by redirecting forces through the entire hand and protects the tip of the thumb against mechanical influences
- The user automatically uses an ergonomic hand position for clipping, inserting or plugging tasks on the assembly line or during paint work.
- Full freedom of movement for thumb joint
- Good fit thanks to seven available sizes
- Easy handling thanks to low weight, can be put on or taken off quickly

### DE Anwendungshinweise

- 1 Ziehen Sie das Paexo Thumb wie einen Fingerhut an. Es sollte fest, aber angenehm sitzen. Das Ottobock Logo zeigt zur Handinnenfläche.
- 2 Führen Sie den Daumen zum Zeigefinger. Der Bügel liegt auf dem 2. Glied des Zeigefingers auf.
- 3 Bringen Sie die Kraft mit der Spitze auf das Werkstück auf; belasten Sie dabei den Bügel.

### EN Instructions for use

- 1 Don the Paexo Thumb like putting on a thimble. Fit should be firm but comfortable. The Ottobock Logo points to the inner hand.
- 2 Bring your thumb to your index finger. The buckle rests on the 2nd section of your index finger.
- 3 Please use the buckle to apply force with the tip of the Paexo Thumb to the part.

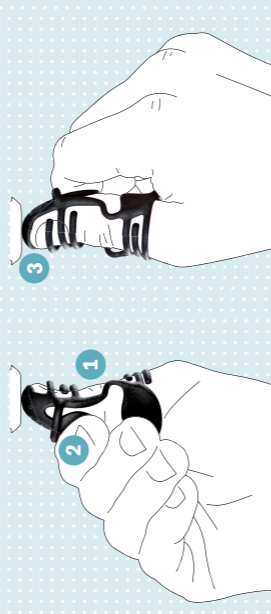

328

38

107

41.5

104.5

37

222